CE Surveyor III \$385 + S/H

Windows CE Graphical User Interface

Friendly Touch-Screen Data Input

Interface with **Total Stations**:

Topcon Lietz Pentax Leica Nikon

High Point Storage and Calculation Speed

Alphanumeric & Numeric Point ID

Colorful Basemap background (streets, hydrology, etc.)

Adjustment: compass, transit, least squares

In-Field Area & Length Calculation

Powerful Point Symbology and Line Patterns

Extensive Coordinate Geometry Functions

Inverse/Traverse Intersection

Area Cut

Direction Cut Hinge Cut Area

Corner Angle Curves

Spiral Curve

3 Point Curve Vertical Curve

Horizontal Curve Curve By Radius

Radius Point

Curve Between Tangents

Benchmark

Station Offset


Known Station & Offset

Known Coordinates

Known Measurement


Known Offset

Multiple Points T/R/S Least Square Fit Translate/Rotate/Scale Resection 2-Point & 3-Point **Earthworks**

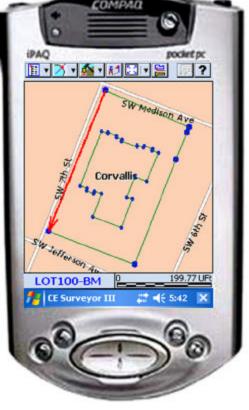

Visit **cmtinc.com** for a detailed list of functions

Traverse to new stations, take side shots and view coordinate information.

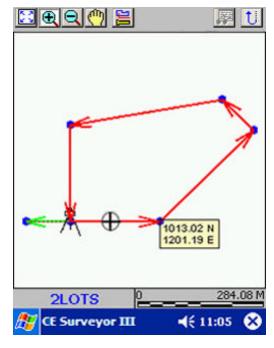

Field Work Custom Settings:

Collimation Correction

EDM Correction

Prism Constant Correction

Pressure/Temperature Correction

High Precision to 6 decimal places

Sequence: BFFB, BFBF, BBFF

Angle Averaging: Up to 16 sets

Horizontal & Vertical Tolerance

Remembers Foresight Height

Distance Measurements:

Single or Averaged

Optional Backsight Distance Display

Other Highlights:

Distance & Area Measurement

NEZ/UTM/SPC & User Defined System

Zoom and Pan Functions

Heads-Up-Digitizing: Point, Line, Area

Store Feature/Attribute/Value Feature/Attribute/Value Editor

Codes for drawing Lines and Areas


Flexible Configuration

Angle Unit Vertical System Azimuth System Show Side Shots


Color/Pattern

Coordinate System Job/Feature List Setup Display Stakeout

Use the powerful **Traverse function** to create new Occupy Stations when line of sight is obstructed.

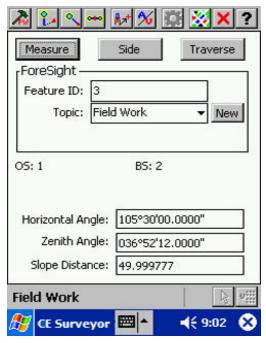

Stakeout accurate to 6 decimal places.

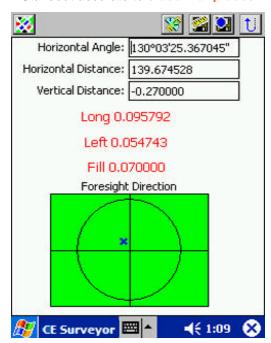


CMT Vectorized Basemap

- Occupies very small memory space
- High-quality, multi-layered detailed georeferenced data
- Enhanced for easy viewing and beautiful presentation
- BaseMaps can be loaded automatically


Direct Interface with CMT CogoCAD PRO
Survey on top of clear Basemap
Multiple Stakeout Options

• Point • Offset • Slope • Elevation

On-screen graphics provide a helpful visual reference.

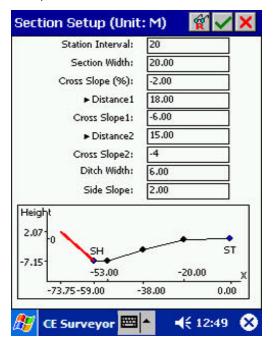

CE Surveyor III makes staking out easy.

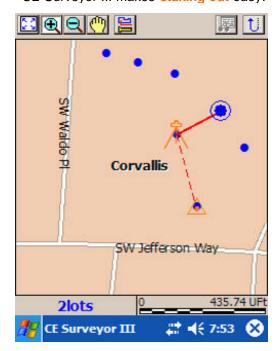



email: support@cmtinc.com